

## 11. ABOUT US.

Driven by the passion for innovation, we at Dr Trust endeavour to provide our customers with the latest medical inventions with an objective to promote good health and wellness all around the world. All the medical devices and health monitors provided by Dr Trust are supported by accurate, latest and ground breaking technologies, innovated at our headquarters in NY, USA. Most of the our products adhere to the most stringent CE and FDA guidelines and are strongly recommended by doctors and health practitioners. Our products are designed in the utmost exemplary ways to ensure that their accuracy and convenience are unrivalled. The ease of their use and operation makes them even more suitable for users of all age groups.

Dr Trust strives to enhance the quality of lifestyle by providing with the most trusted and innovative health care and wellness products. Being a renowned global leader in health care products, Dr Trust ensures that our technically efficient team works dynamically and tirelessly to provide the best of the medical devices to our clients. The products that we have to offer are suitably designed for use at homes, laboratories and hospitals.

**We bring to you a variety of best self medical devices, trusted and used by Doctors, medical professionals and home users all over the world.**

**Dr Trust®**

# Dr Trust® BOTTLE WARMER -7001



Scan to View  
Product Demo Video  
[www.drtrustusa.com/7001](http://www.drtrustusa.com/7001)



**USER  
INSTRUCTIONS**

Congratulations on your purchase of the Dr Trust Baby Bottle Warmer-7001. Please read the instructions manual carefully for using the bottle warmer correctly.

## TABLE OF CONTENTS

INTRODUCTION	3
PRECAUTIONS	3
COMPONENTS AND INSTRUCTIONS	6
MILK WARMING METHOD	7
FOOD HEATING METHOD	8
STERILIZATION METHOD	9
PRECAUTIONS FOR CLEANING	10
TECHNICAL SPECIFICATION	10
CUSTOMER SUPPORT	11
ABOUT US	12

## 1. INTRODUCTION

Dr Trust Baby Bottle Warmer is designed to warm baby bottles and food items conveniently. It comes with a new temperature control system to fulfill the baby food warming demands with highest safety and hygiene. The movable control knob allows you to set the correct temperature as per your preference. It is a high-performance warmer that fits baby bottle and food cup easily. This is an electric device designed to be used in household. If you do not take appropriate preventive measures, it will result in serious personal injury or property damage. So, when using it, basic safety precautions should always be followed including the following;


## 2. PRECAUTIONS

### ⚠ Warning

Be careful with its operations as execution errors can cause significant problems.

### ⚠ Danger

- Don't touch plug with wet hand.

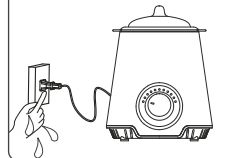

- Please take away plastic bag from babies to avoid choking.



- Don't put this product close to flammable and explosive materials.




- Always put this product on a flat surface.




- Do not immerse the product, cord and its plugs into water or other liquid.




- Don't touch shell during heating process to avoid scald.

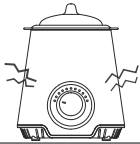

- If product broken, please go to a professional to repair it or changing its attachments.

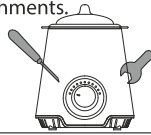

- Please disconnect power supply and wait for it to cool down then clean it.

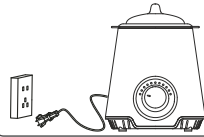

## Notice

- Make sure the bottle warmer should have water during operating process. Dry burning is forbidden.
- Please check food temperature and blend it before feeding babies.
- Don't heat for long time to avoid nutrition loss.
- Child cannot use this product.
- Close supervision is necessary when any appliance is used near children.
- Do not touch hot surfaces instead use handles or knobs.
- Don't put electric wire some-where babies and child can touch.
- Persons who are physically or mentally handicapped or lack experience and knowledge must operate the product under the supervision and guidance of those who have gained experience in the safe use of the appliance.


If the mains cord is damaged, it must be replaced by a professional in order to avoid danger.

- Before connecting the product to the power supply, be sure to check that the supply voltage indicated on the product matches the supply voltage.
- The product's power plug must be plugged into a grounded receptacle and be sure it is securely inserted.
- Do not expose the power cord or plug to hot surfaces and sharp corners.
- Do not use this product if the plug, power cord, or the product itself is damaged.
- When not using it, please unplug the power, clean and dry it for safe storage.
- This appliance can be used by children aged from 3 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Keep the appliance and its cord out of reach of children aged less than 3 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Mothers should test the food temperature before feeding to make sure it is proper and avoid scalding babies.

### 3. COMPONENTS AND INSTRUCTIONS

Please check component quantity before use it. Contact seller if lack of components.

No.	Name	Material	Heat	Cold	Quantity
A	Food Lid	PP	120°C	-20°C	1
B	Food Bowl	PP	120°C	-20°C	1
C	Liner	Stainless steel	/	/	1
D	Shell	PP	120°C	-20°C	1
E	Rotated Switch	ABS	80°C	-20°C	1
F	Bottom Cover	PP	120°C	-20°C	1
	Manual				1

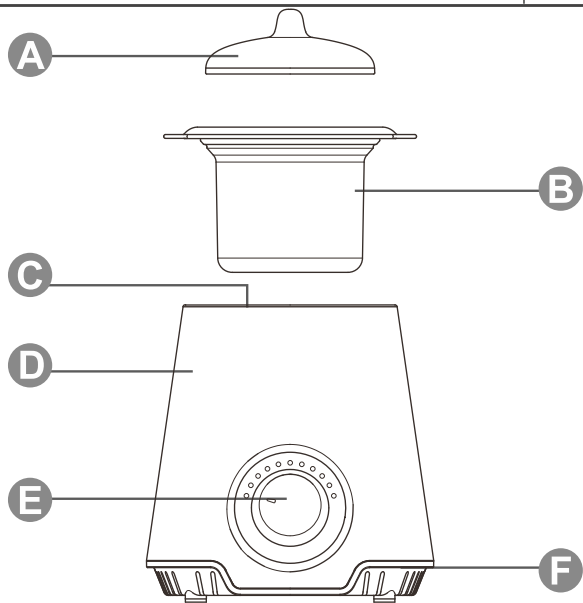




### Tips

- To provide better food for babies, don't put food in bottle warmer for long time.
- Don't keep milk in bottle warmer over 2 hours, otherwise milk will loss nutrition.
- If you need prepare warm milk for babies anytime, we suggest adding water to bottle. When feeding babies, add milk powder and blend it.
- Speed heat method: Turn switch to or for about 4 mins, then turn to, after 1 mins milk will reach suitable temperature.

**(Please test feed temperature before feeding babies.)**

### 4. MILK WARMING METHOD


- Wash the container before use to ensure hygiene.
- Place the warmer in a horizontal position. Do not tilt it and place the bottle with water or milk in the container. (Note: "The bottle should not be dry heat).
- Add the appropriate amount of pure water into the container (The water level should be like that it does not make the bottle float appropriate).
- Turn on the power, turn the knob to start to warm milk, the indicator light is on and off alternating normal state (marked warmer is automatically adjust the temperature, so that food is more uniform heat absorption, and does not destroy the nutrients).

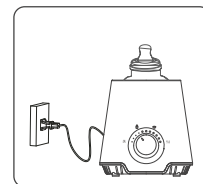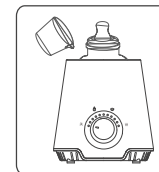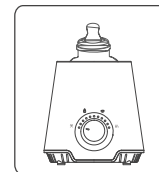


- Heating process, the indicator light turns on and off 4-5 times to reach constant temperature.
- When not in use, turn the knob to the OFF position and unplug the power outlet.
- Test temperature before feeding.

## 5. FOOD HEATING METHOD


- Add appropriate pure water into container (Water level can't reach liner mouth).

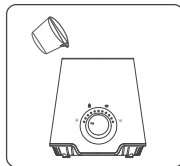

- Put food bowl with food into container and cover the food lid. (Note: Food bowl can't dry heat).

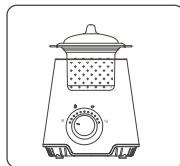


- Connect the power, turn knob to start heating food, indicator light on and off is normal situation. (Means bottle warmer is automatically adjust temperature, keep food endothermic more evenly and fully and not loss nutrition.)

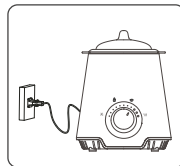


- During heating process, indicator light change (ON/OFF) for 4-5 times can reach constant temperature condition.
- When not in use, turn the knob to the OFF position and unplug the power outlet.
- Test temperature before feeding.

## 6. SIMPLE STERILIZE METHOD


- Clean the container before use to make sure health.
- Add appropriate pure water into container (Water level can't reach liner mouth).

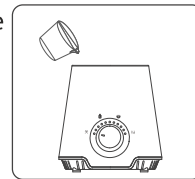

- Connect power, turn switch to, start heating.

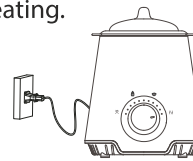

- Put feeding items to container for sterilizing.

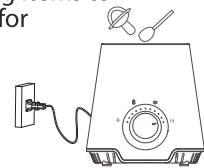

## 7. PRECAUTIONS FOR CLEANING

- Please disconnect power and wait for warmer cool before cleaning it.
- Don't immerse base into water.
- Only use clean cloth to wipe it.
- Do not use corrosive detergents, chemical abrasive cleaning agents or hard metal wire mesh brush for cleaning.
- Food Bowl and Food Lid can be cleaned with detergent.
- To avoid scale, please use pure water.
- If have scale, add scale cleaning agent or acetic acid with water into the container and connect power supply. Switch ON to and heat for 5 mins then turn off.
- Disconnect the power supply. Then use bottle brush to clean it after machine cooled.

## 8. TECHNICAL SPECIFICATION

Name	DR Trust Bottle Warmer
Model	7001
Humidity	50%~80%
Rated power	220W
Power Supply	220-240V 50/60 Hz
Room temperature	15°C~30°C

## 9. NON-WARRANTY

Improper use, or misuse, and man-made damage.

Damage due to natural disasters and other force majeure cause.

## 10. CUSTOMER SUPPORT

### CONTACT ADDRESS

USA

Nureca INC.USA

276 5th Avenue, Suite 704-397,

New York (NY) - 10001, USA

INDIA

Corporate Office (Mumbai)

Nureca Limited

B2-166, Time Square, 7th and 8th Floor,

CTS No 349 and 349-1

Western Express Highway, Andheri East,

Mumbai, Mumbai City, Maharashtra, 400069

Contact us

India: +91-7527013265 / +91-9356658436

Website: [www.drphys.io](http://www.drphys.io)

Email: [customercare@nureca.com](mailto:customercare@nureca.com)

Connect with us on social networks

Facebook: [drphysiousa](https://www.facebook.com/drphysiousa)

Instagram: [drphys.io](https://www.instagram.com/drphys.io)

Youtube: [NurecaUSA](https://www.youtube.com/NurecaUSA)

COPYRIGHT ©2020 DR PHYSIO. ALL RIGHTS RESERVED